

⚠ DANGER**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

Disconnect all power before servicing equipment.

Failure to follow these instructions will result in death or serious injury.

⚠ DANGER**RISQUE D'ÉLECTROCUTION, D'EXPLOSION OU D'ARC ÉLECTRIQUE**

Débranchez tous les circuits d'alimentation avant de procéder à l'entretien de l'appareil.

Le non-respect de ces instructions provoquera la mort ou des blessures graves.

⚠ GEFAHR**GEFAHR EINES ELEKTRISCHEN SCHLAGS ODER LICHTBOGENS UND EXPLOSIONSGEFAHR**

Trennen Sie die gesamte Spannungsversorgung, bevor Sie Arbeiten an der Anlage vornehmen.

Die Nichtbeachtung dieser Anweisungen führt zu Tod oder schweren Verletzungen.

⚠ PELIGRO**PELIGRO DE DESCARGA ELÉCTRICA, EXPLOSIÓN O DESTELLO DE ARCO VOLTAICO**

Desconecte toda la corriente antes de realizar mantenimiento en los equipos.

Si no se siguen estas instrucciones se pueden sufrir lesiones graves o incluso la muerte.

⚠ PERICOLO**RISCHIO DI FOLGORAZIONE, ESPLOSIONE O BAGLIORI DA ARCO**

Isolare l'alimentazione prima di effettuare interventi di manutenzione sull'apparecchio.

Il mancato rispetto di queste istruzioni provoca morte o gravi infortuni.

⚠ PERIGO**PERIGO DE CHOQUE ELÉCTRICO, EXPLOSIÃO OU ARCO ELÉCTRICO**

Desligue toda a alimentação antes de efectuar manutenções ao equipamento.

A não observância destas instruções resultará em morte ou ferimentos graves.

⚠ 危险**电击、爆炸或电弧危险**

在检修设备之前，请断开所有电源。

若违背这些说明，则可能会导致严重的人身伤害甚至死亡。

⚠ ОПАСНО**ОПАСНОСТЬ ПОРАЖЕНИЯ ЭЛЕКТРИЧЕСКИМ ТОКОМ, ВЗРЫВА ИЛИ ВСПЫШКИ ДУГИ**

Полностью отключите питание перед обслуживанием оборудования.

Несоблюдение этих инструкций приведет к смерти или серьезной травме.

Visit our website at www.schneider-electric.com to download user manuals for the LTM R or other documents.

Visitez le site www.schneider-electric.com pour télécharger les manuels d'utilisation des LTM R ou d'autres documents.

Auf der Webseite www.schneider-electric.com können Sie die Bedienungsanleitungen der LTM R oder andere Dokumente herunterladen.






Visite el sitio www.schneider-electric.com para cargar los manuales de utilización de LTM R u otros documentos.

Visitate il sito www.schneider-electric.com per scaricare i manuali d'uso di LTM R o altra documentazione.

Visite o site www.schneider-electric.com para descarregar os manuais de utilização LTM R ou outros documentos.

请访问我们的网站 www.schneider-electric.com 下载 LTM R 的用户手册或其它文档。

С веб-сайта www.schneider-electric.com можно загрузить справочное руководство по LTM R и другие документы

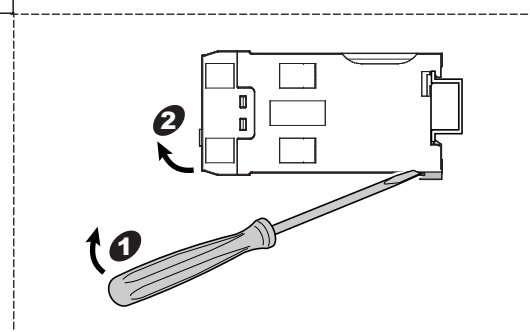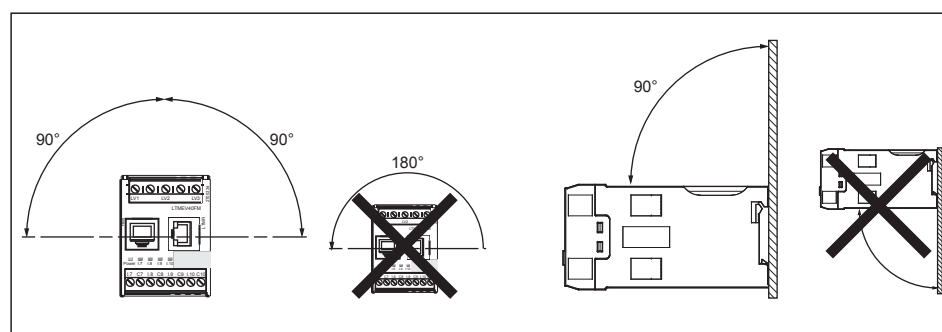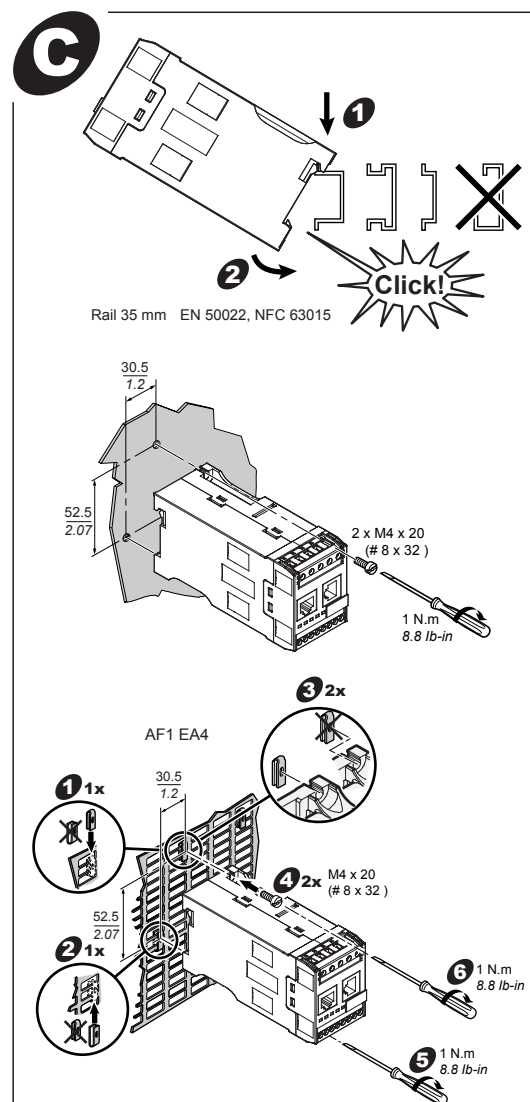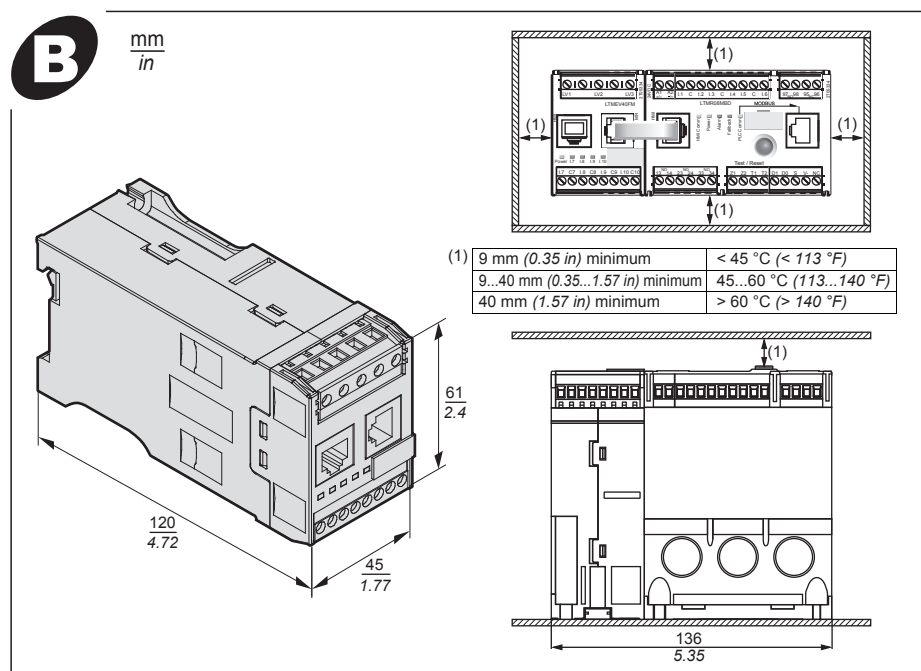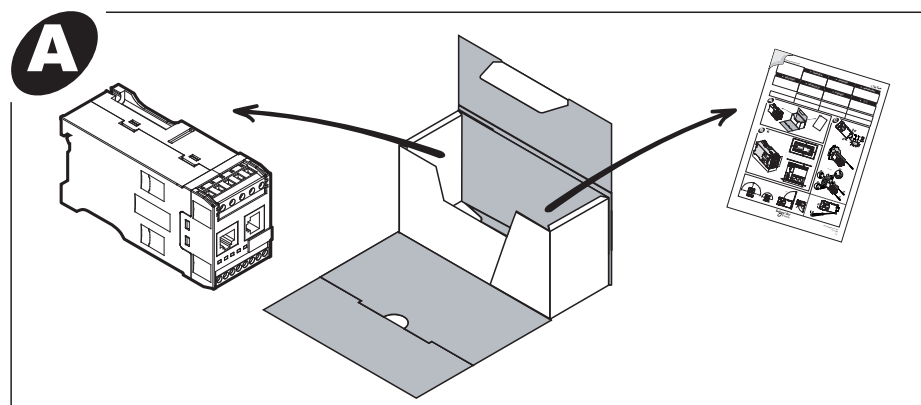

LTM9TCT

							
7 mm	0.2...2.5 mm²	0.2...1 mm²	0.2...2.5 mm²	0.2...1.5 mm²	0.25...2.5 mm²	0.6 N.m	Ø 3 mm
0.28 in.	AWG 24...14	AWG 24...18	AWG 24...14	AWG 24...16	AWG 22...14	5 lb-in	0.125 in.

The diagram illustrates the terminal block layout for the LTM108MBD. It shows three main sections: Power, I/O, and Communication. The Power section includes terminals for 1.7, 1.8, 1.9, and 1.10. The I/O section includes terminals for 1.7, C7, 1.8, C8, 1.9, C9, 1.10, and C10. The Communication section includes terminals for 13, 14, 23, 24, 33, and 34. A detailed view of the terminal block shows the pin configuration: 1 (D1), 2 (D0), 3 (VP), 4 (OVL), 5 (D1), 6 (D0), 7 (VP), 8 (OVL). The diagram also shows the connection of the LTM108MBD to the LTM108MBD and the LTM108MBD to the LTM108MBD.

- ① = LTMCC004
② = LU9R03
③ = LU9R10