

22W DIMMABLE DRIVER + JUNCTION BOX

RSXJB22-PSU

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

! Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician

Note:

Product technical information and specification may change over time without prior notification. For the latest technical information please visit our web site www.ledgrouprobust.com.au

-20°C < Ta < +40°C, 220-240V ~ 50/60Hz, Class II, IP20

Leading and trailing edge dimmable.





See website for dimmer compatibility list: www.ledgrouprobust.com.au

Installation

- 1 Ensure mains supply is switched off before commencing installation.
- 2 Choose suitable location for driver and junction box noting max. length of cables
- 3 The luminaires require a round hole Ø30mm cut into the ceiling
- 4 Before cutting, ensure that the hole does not impinge on joists, pipe work, cables or other building services.
- 5 Connect the quick fix connector on the fitting to junction box.
- 6 Connect supply: Insert plug in the socket.
Alternatively connect supply cables: Brown to Live, Blue to Neutral
- 7 Offer luminaire up to cut-out. Hold retention spring vertically against heat sink, push fitting through the cut-out until the springs come down on the upper side of the plasterboard. Ensure that the fitting is secure and the bezel is tight against the ceiling

Note: For correct operation 3 or more fittings have to be connected.

When less than 6 fittings are connected please insert link connector in the unused ports.

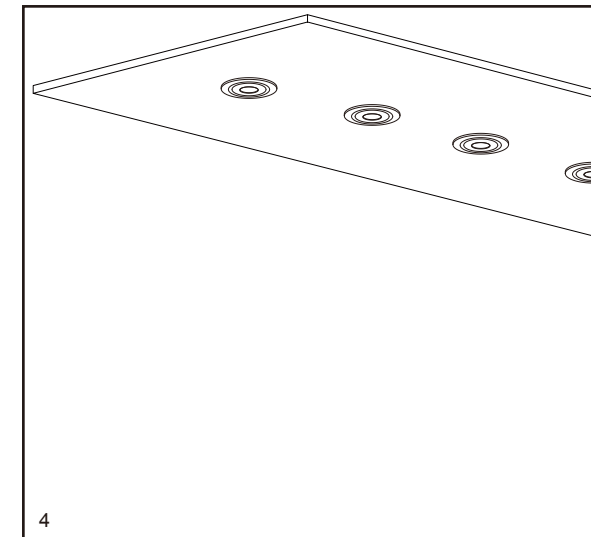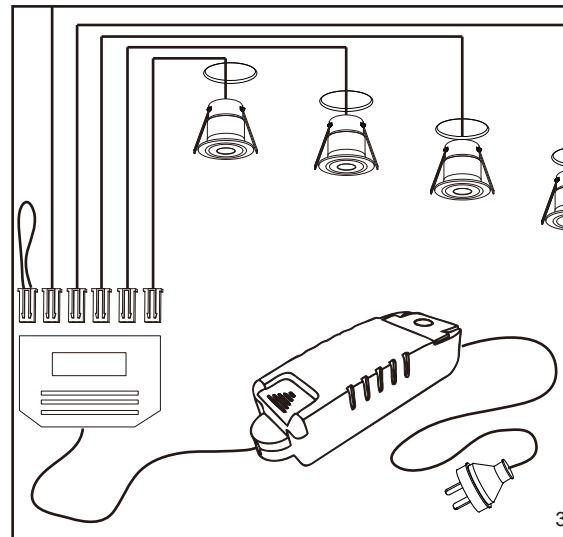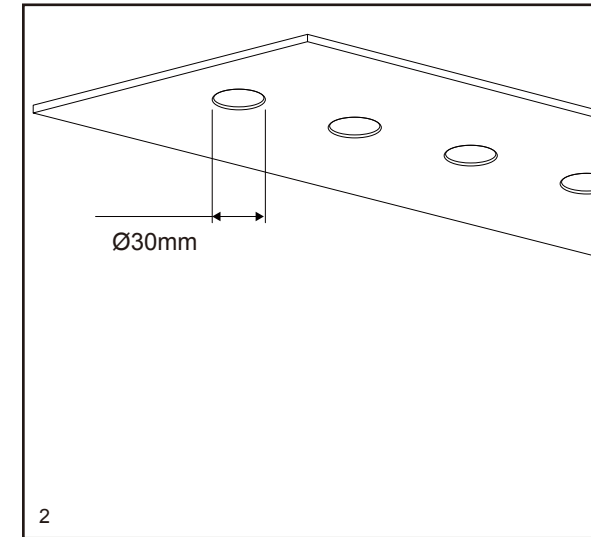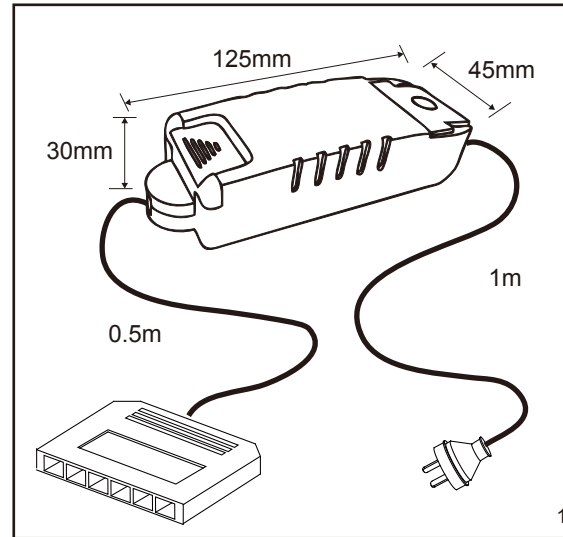

The Installation must be carried out by a qualified electrician