
INSTRUCTION MANUAL

UNIVERSAL REMOTE CONTROL To suit Ventair New Generation Ceiling Fan range

Model: UCFR



SUGGESTED WIRING CONFIGURATION

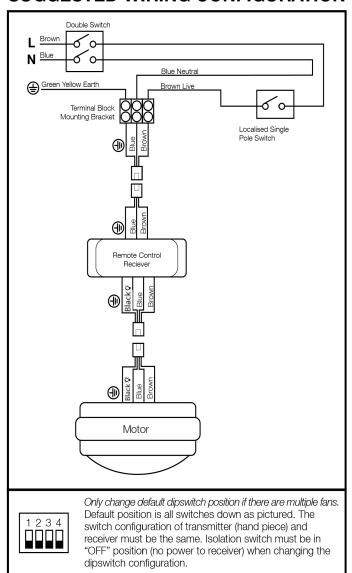

CAUTION

Read Instructions Carefully For Safe Installation and

- ●WIRING
 INSTALLATION
 ●TECHNICAL
 SPECIFICATIONS
- •OPERATION
- WARRANTYINFORMATION



INSTRUCTIONS

Technical specifications

Operating voltage frequency: 220-240V, 60Hz

Maximum operating wattage for ceiling fan: 100W Maximum operating wattage for light: 100W

Battery: 9V 6F22 x 1

A localised single pole switch (isolation switch) and an all pole disconnection switch should be included in the fixed wiring. (A safetly switch in the switchboard can be considered as a double pole disconnection point.)

Operation

Standby Mode: After the electric power has been connected, a beep will be heard, and the fan is in standby mode. **On and Speed Buttons:** After the electric power has been connected, press any speed button (HIGH, MED, LOW) to start the fan. A confirmation beep will be heard. To change the speed, please press different speed buttons.

Off Button: Press Off button to turn off fan. A beep will be heard.

Light Buttons: Press the buttons on remote to turn light ON and OFF as required.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major fault and compensation for any other reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major fault.

This product comes with a 12 month replacement warranty valid from the date of purchase. If you consider there is a manufacturer defect to the remote control, contact the warranty line on 1300 665 926 or log a claim at www.ventair.com.au/warranty



4 Capital Place, Carrum Downs VIC 3201 ventair.com.au

Ph: +61 3 9775 0556 Fax: +61 3 9775 0775