



Clipsal Wilco ROWCO WMB Series Appliance Inlets

WMB332R and WMB532R







Installation Instructions

A CAUTION

EQUIPMENT INSTALLATION HAZARD

- Verify that all installation and set up procedures have been completed.
- All conduit entry points and mounting holes must be sealed To ensure the IP66 Rating is maintained.
- Suitable silicone sealants include: Dow Corning 732, 739 and 1080, Ramset RC804 and RBC833, Selleys Roof and Gutter Sealant
- · Internal plastic parts may fail if incorrect silicone sealants are used.
- Torque levels for fixing of cover screws should be set between 0.8Nm - 1.2Nm.
- Terminal screws may have loosened during transit and should be checked for tightness before completing installation.

Failure to follow these instructions can result in injury or equipment damage.

For your safety

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- This product must only be installed and serviced by appropriate qualified and/or licensed electrical personnel.
- Isolate the electrical supply before doing any work on this product.
- Ensure that the product had been correctly installed and tested for safe operation before reconnecting the electrical supply.
- Ensure continuity of the earth is maintained throughout the installation.
- All metal parts must be earthed according to AS/NZS3000 wiring regulations.

Failure to follow these instructions will result in death or serious injury.

NOTICE

EQUIPMENT DAMAGE HAZARD

- If installing this product in an area defined in AS 2312 as Category C5, it is recommended to install a suitable non-metallic washer between any screws and the painted surface of the product, to provide additional protection from corrosion. This includes the cover screws and any mounting screws.
- Coating the thread of the cover screws with Tef-Gel™ lubricant or equivalent anti-corrosion product prior to installation, may also provide additional protection.
- Care should be taken to avoid damage to the painted surface when installing the product.
- It is recommended the products should be cleaned regularly to avoid build-up of contaminants.


Failure to follow these instructions can result in equipment damage.



Compatibility of Units

New Cat No.	Rating	Number of Pins	Cond. Term. Size in mm	Compatible Plug Socket
WMB332R	250V 32A	3	Min. 6, Max. 16	56CSC332
WMB532R	500V 32A	5		56CSC532

Assembly Instructions

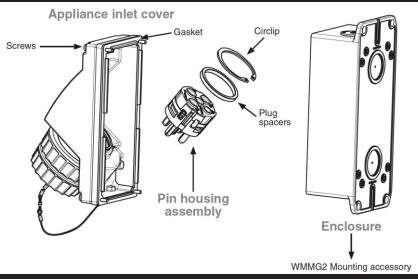

Installation

- 1. Strip Flexible cables as shown.
- 2. Remove pin housing assembly from parts pack.
- 3. Place cable through plug spacer and connect conductors into pin housing assembly terminals and tighten screws on bared end of conductor to ensure good electrical contact.
- 4. Check earth wire is connected to Earth terminal.
- 5. Reseat pin housing assembly in appliance inlet cover and secure in place with plug spacer and circlip.
- 6. Place assembled unit on mounting accessory and tighten mounting screws firmly, ensuring gasket is evenly seated.

Customer Care

Schneider Electric (Australia) Pty Ltd

33-37 Port Wakefield Road, Gepps Cross SA 5094

Customer Care: 13 73 28

Email: customercare.au@se.com

www.clipsal.com.





Schneider Electric reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in these instructions are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Schneider Electric 2020

Stripping Detail (All Conductors)

15_{mm}

For units 32A and above

This material is copyright under Australian and international laws.

Except as permitted under the relevant law, no part of this work may be reproduced by any process without prior written permission of and acknowledgment to Schneider Electric.