





Contactor
Compliant with IEC/EN 61095

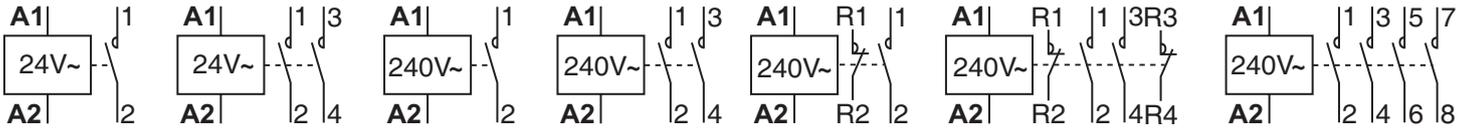

PLEASE NOTE

- The installation, maintenance and eventual replacement of this device must only be carried out by a qualified electrician.
- This device must not be repaired.
- All applicable local, regional and national regulations must be complied with during the installation, use, maintenance and replacement of this device.
- This device should not be installed if, when unpacking it, you observe that it is damaged.
- Schneider Electric cannot be held responsible in the event of noncompliance with the instructions in this document and in the documents to which it refers.
- The service instruction must be observed throughout the life time of this device.

1 Description

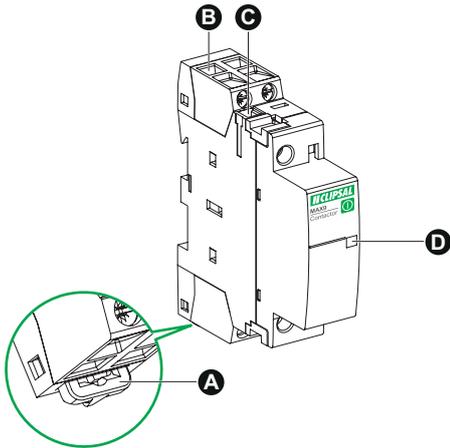



- A** Clip for DIN rail mounting
- B** Connection terminals - main circuit
- C** Connection terminals - control circuit
- D** Status indicator

2 Installation

⚠ ⚠ DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Turn off all power supplying this device before working on it.
 - Use a voltage tester with a suitable rated voltage, in order to check that all active conductors aren't energized.
- Failure to follow these instructions will result in death or serious injury.**

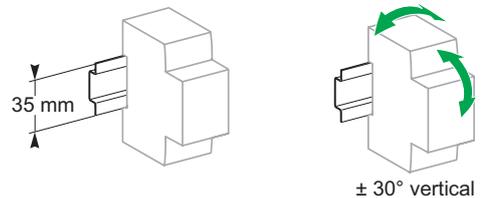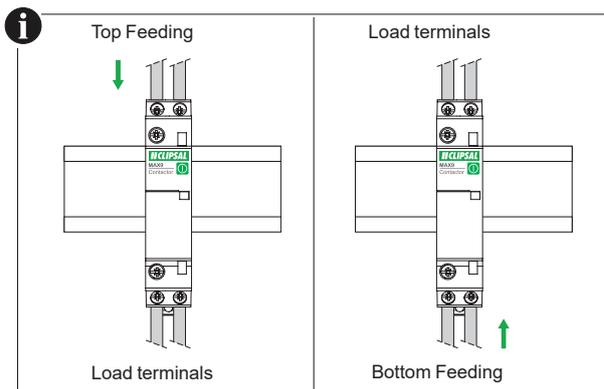


2 Installation


Control	25 A	10 mm	0.5...6 mm ² 2 x (0.5...2.5) mm ²	0.5...4 mm ² 2 x (0.5...2.5) mm ²	0.8 N.m	4 mm	PZ1				
	63 A										
Power	25 A	10 mm	1.5...6 mm ² 2 x (1.5...2.5) mm ²	1.5...4 mm ² 2 x (1.5...2.5) mm ²	0.8 N.m	4 mm	PZ1				
	63 A										

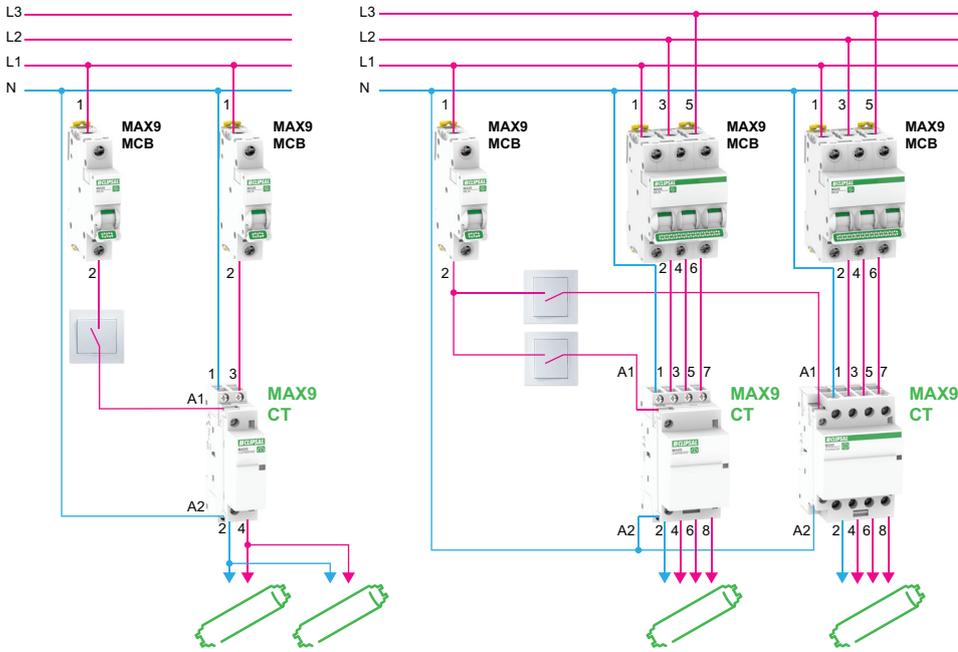

Latched signal

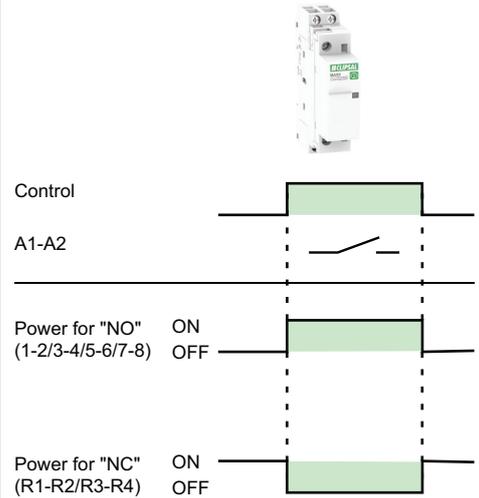

3 More information...

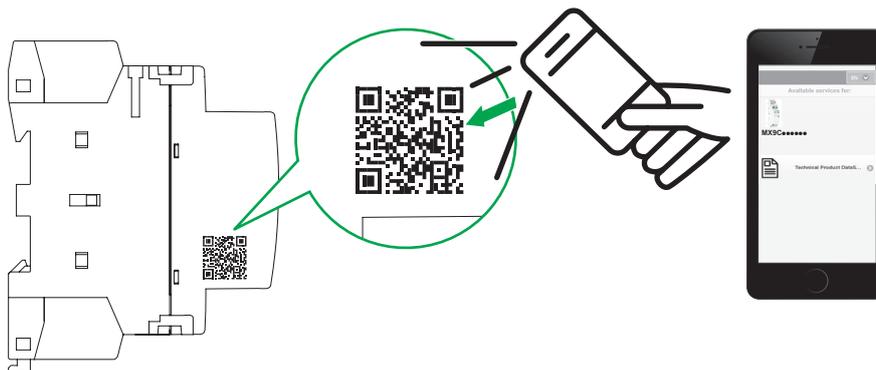

Clipsal by Schneider Electric (Australia) Pty Ltd
 33-37 Port Wakefield Road
 Gepps Cross
 South Australia 5094

Customer Care Centre
 Tel: 1300 369 233
 Email: customer care.au@se.com
 Fax: 1300 369 288
www.clipsal.com

JYT3756200-00