







# **Operating Manual**

### A 4022A 30 WATT PUBLIC ADDRESS AMPLIFIER

Distributed by Altronic Distributors Pty. Ltd. Phone: 1300 780 999 Fax: 1300 790 999 Internet: www.altronics.com.au

### **IMPORTANT NOTE:**

Please read these instructions carefully from front to back prior to installation. They include important setup instructions. Failure to follow these instructions may prevent the unit from working as designed.

User manual revision number: 1.0 27/05/2024



**REDBACK** is a registered trademark of Altronic Distributors Pty Ltd

You may be surprised to learn that Altronics is still manufacturing hundreds of product lines right here in Australia. We have resisted the move offshore by offering our customers better quality products with innovations to save them time and money.

Our Balcatta production facility manufactures/assembles:

Redback public address products One-shot speaker & grill combinations Zip-Rack 19 inch rack frame products

We strive to support local suppliers wherever possible in our supply chain, helping to support Australia's manufacturing industry.

### **Redback Audio Products**

100% developed, designed & assembled in Australia.

Since 1976 we have been manufacturing Redback amplifiers in Perth, Western Australia. With over 40 years experience in the commercial audio industry, we offer consultants, installers and end users reliable products of high build quality with local product support. We believe there is significant added value for customers when purchasing an Australian made Redback amplifier or PA product.

### Local support & feedback.

Our best product features come as a direct result of feedback from our customers, and when you call us, you speak to a real person - no recorded messages, call centres or automated push button options. It's not only the assembly team at Altronics who are employed as a direct result of your purchase, but hundreds more at local companies used in the supply chain.

### Industry leading 10 year warranty.

There's a reason we have the industry leading DECADE warranty. It's because of a long tried and tested history of bulletproof reliability. We've heard PA contractors tell us they still see the original Redford amplifier still in service in schools.

We offer this comprehensive parts & labour warranty on almost every Australian Made Redback public address product. This offers both installers and end users peace of mind that they will receive prompt local servicing in the rare event of any problems.

Published by Altronic Distributors © 2024 Altronic Distributors

#### **OVERVIEW**

The amplifier features one balanced microphone and two line level (RCA) inputs. VOX muting is included which mutes input 2 when the input 1 microphone or line input is activated. The A 4022A conservatively delivers 30W RMS power with a frequency response extending from  $\approx$  50Hz to 10kHz ±3dB at a total harmonic distortion (THD) of less than 0.5% @ 1kHz. Bass and treble controls and VOX sensitivity are all adjustable. Phantom power (15V DC) is available on the input 1 XLR input and the input sensitivities of AUX 1 and AUX 2 inputs can be set between 100mV and 1V. The amplifier operates from 240V AC mains and the output comes standard suitable for a 100V line load. Fuses on both AC and the output speaker line provide excellent fault condition protection and robust performance.


#### **FEATURES**


- 1 Balanced microphone input
- 2 Line inputs
- VOX muting on input 1
- Phantom Powering (15V DC) available on XLR input
- Adjustable VOX and input level sensitivity

- Bass and Treble controls
- Full 30W RMS output (100V)
- 100V output
- Very Low noise and distortion
- 240V AC operation

#### INPUT CONNECTIONS

The microphone input can be connected via a balanced XLR 3 pin socket. Refer to figure 1. The line inputs are connected via standard RCA sockets

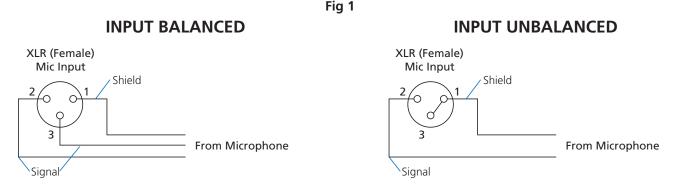

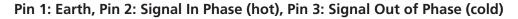

#### SPEAKER CONNECTIONS

Speakers fitted with 100V line transformers may be connected to the output terminals on the rear of the amplifier. Always ensure the total load of the fitted speakers does not exceed the rated output of the amplifier (ie 30 watts for the A 4022A amplifier) otherwise damage may result. When fitting speakers with line transformers the impedance of the load cannot be measured using a standard multimeter. An impedance meter such as Altronics Q 2007 is required. Fig 2 lists the impedance at certain loads of speakers fitted with 70V and 100V line transformers. So for a total load of 30 watts using 100V line transformer fitted speakers, the impedance of the speaker load should be  $333\Omega$ .

About 70V & 100V Line Speaker Systems	Load	70V	100V		
. ,	0.5W	9.4kΩ	20kΩ		
Wiring speakers in parallel for 70/100V line: Where several speakers are to	0.66W	7.12kΩ	15kΩ		
be used at one time, on one circuit, it becomes necessary to use speakers fitted with line-matching transformers. This is to overcome the effects of connecting speakers in parallel and cable losses. The amplifier generally has an output	1W	4.7kΩ	10kΩ		
	1.25W	3.76kΩ	8kΩ		
	2W	2.35kΩ	5kΩ		AEK
	2.5W	1.88kΩ	4kΩ	Q 2007 Impe	
voltage of 100 volts (70 volts is typically used in North America, however	3W	1.56kΩ	3.3kΩ	OHM=	>50k
operation is similar). In this configuration the total wattage load on the amplifier	5W	940Ω	2kΩ		
is derived from adding all the line transformer primary tap ratings together. For	7.5W	626Ω	1.3kΩ		
example, 70 one watt speakers will have a total speaker load of 70 watts. Or	10W	470Ω	1kΩ		
alternatively, it is conceivable to connect 100 one watt speakers to a 100 watt,	15W	313Ω	666Ω		
100 volt line amplifier.	20W	235Ω	500Ω	TEST	
roo voit into amplinoi.	30W	156Ω	333Ω	SPEAKER LOAD T	
<b>Measuring 70/100V Line Speaker Impedance:</b> To measure amplifier system load, you must use an impedance meter in order to measure the ac resistance of the connected speaker network. Impedance cannot be measured with a standard multimeter, as this measures the dc resistance. Use the Altronics	40W	117Ω	250Ω	Auto power off a SYSTEM CHECK	
	60W	780	166Ω	Hold TEST button Auto power off a	
	100W	47Ω	100Ω	Press to power O	
	125W	37Ω	80Ω		
	250W	19Ω	40Ω		
Q 2007 or similar impedance meter.	500W	9.4Ω	20Ω		

#### **VOX MUTING**

VOX muting is provided on input one, which, when activated, automatically mutes input 2. VOX can be selected ON or OFF via DIP switch 3. This is factory set in the OFF position. VOX sensitivity is adjusted via the trimpot on the front of the unit.

#### PHANTOM POWER

Phantom power is provided on the mic input XLR connector. This is selected ON or OFF via DIP switch 4. When in the ON position 15V DC is supplied to a connected microphone.

#### INPUT SENSITIVITY

The input sensitivities of AUX 1 and AUX 2 inputs can be set to either 100mV (OFF) or 1V (ON) via DIP switches 1 and 2.

#### OPERATION

Once all inputs and the output is connected:

1) Turn the bass and treble controls to midway.

2) Turn the volume controls to zero.

3) Turn the power switch on. The power indicator should illuminate.

4) Turn on microphone or auxiliary input source and adjust appropriate volume control to desired level.

Note: Both the mic and auxiliary for input 1 are mixed together. Both the mic and auxiliary input can be run together but note there is only the one volume control for both of these.

#### TROUBLESHOOTING

#### No Power, No Lights

Make sure amplifier power switch is on. Make sure mains power switch is on at the wall. Check the mains fuse. Replace with only the correct type and rating (800mA M205). Over rated fuses with invalidate warranty.

#### **Distorted Output**

Check that the speaker type is correct for the output that you are using (ie. 100V line). Check for any short circuits on the speaker line.

#### Very Low Output Volume

Make sure that the input is the correct level (check for shorted connectors). Check for any short circuits on the speaker line.

#### **Continually Blows Fuses**

Make sure that the speaker line is not shorted. Check speaker types, ratings and if on correct output.

#### Amplifier Keeps on Cutting In & Out

Make sure that there is adequate ventilation around the amplifier. Check the vent slots on the front,top and sides are not covered or blocked and the fan on the rear is functioning correctly. Check also speaker types, ratings and for any short circuits on the speaker line.

#### **SPECIFICATIONS**

#### **POWER OUTPUTS**

Power:	A 4022A - 30 Watts RMS
Distortion:	< 0.5%, @ 1kHz
Output line:	

#### **FREQUENCY RESPONSE**

Mic input :	.52Hz - 10kHz, ±3dB
Line inputs:	.40Hz - 10kHz, ±3dB

#### INPUT SENSITIVITY

Mic inputs: 2.6mV k	balanced
Line inputs:	.150mV

#### SIGNAL

All volume controls min, typically 72dB below rated output. All inputs display same S/N ratio

LINE OUTPUT ......  $600\Omega$  balanced, 0dB , 3 Pin XLR

#### **OUTPUT CONNECTORS**

Speakers: ..... Screw terminals

#### INPUT CONNECTORS

Mic Input:	3 pin XLR balanced
	. RCA stereo socket, bridged mono
240V AC power:	IEC power connector

#### CONTROLS

Mic/Line inputs: Power: Indicators: Bass: Treble:	On/off switch Power ±10dB @ 100Hz
POWER SUPPLY:	240V AC
FUSE PROTECTION:	
DIMENSIONS	≈300W x 220D x 74H

\* Specifications subject to change without notice