

ROBUS[®]

**HARBOUR EXPRESS 32W/26W/22W/16W LED CORROSION PROOF,
IP66, 4FT, GREY,3000K/4000K/5700K, DALI DIMMABLE**

RHEX12DD-24

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

! Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician. Product or a person falling from height can cause serious personal injury. Please ensure suitable equipment is used by a competent person.

Note:

Product technical information and specification may change over time without prior notification. For the latest technical information please visit our web site www.robust.com.au and www.robustled.co.nz

-20°C < Ta < +40°C, 220-240V ~ 50Hz, Class I, IP66

Luminaire is non-dimmable.

Compatible with R3EM2PA-04 emergency pack, (1.5-hour emergency duration) which must be fixed onto the location marked emergency on the inside of fitting.

Installation

1. Ensure mains supply is switched off before commencing work.
2. Select suitable location for luminaire. Safety note! The power supply cable must not be exposed to mechanical damage.
3. Disassemble the fitting base from the fitting.
4. Mark appropriate fixing hole positions on the wall based on the Dimensional distance marked on the back of fitting and check location of buried cables, pipes and other building services before drilling.
5. Insert the wall plugs into the holes after drilling and fix the brackets onto the wall.
6. Assemble the IP gland into the end of fitting and attach the base to the brackets. Feed supply cables through gland and tighten gland.
7. Connect power supply cable to terminal: Live SL– Brown, Neutral –Blue and Yellow/Green - Earth. Permanent Live (PL) as optional (for EM).
8. Select the wattage (32W, 26W, 22W or 16W) using DIP switch on the driver and adjust colour temperature CCT (3000K, 4000K or 5700K) using a switch. Factory default setting: 4000K, 32W. **WARNING: Do not change wattage and cct when the fitting is on and do not shift to other gear that we dont recommend on dip switch otherwise it would damage the fitting and impact on the lifespan.**
9. Attach metal plate/diffuser to base, refit the clips and fasten them with the screws. Ensure it is secure.

Note: This luminaire has no user serviceable parts. If damaged, disconnect from mains and discontinue use.

DALI System:

The output current programming can be realized through the DALI-2 interface.

Push Dimm mode (Figure8)

Short press(<1s) the pushbutton 5 times quickly within 3s, then long press(>1s) the pushbutton 1 time, The driver will automatically switch to the pushDIM dimming mode.

Max. 50 drivers per pushDIM control line.

Turn on or turn off: Short press pushbutton for 0.2-1s.

Dimming: Long press pushbutton for 1-5s.

Multiple lights synchronize control operation

Method 1:

Step 1: Long press the pushbutton, confirm each luminare is on.

Step 2: Short press the pushbutton, confirm each luminare is off.

Step 3: Long press the pushbutton, confirm each light is from darkest to brightest and all the luminaries are synchronous.

Method 2:

Long press the pushbutton 15s, all lights output to the brightest state.

The Installation must be carried out by a qualified electrician

LED Group Australia Pty Limited
Suite B, 2 Pittwin Road
Capalaba
Queensland 4157
Australia
Tel: 07 3890 5444
Fax: 07 3890 4777
Email: purchases@robust.com
Website: www.robust.com.au

LED Group
Crowe Hogwarth
72 Trafalgar Street
NELSON 7010
New Zealand
Tel: +64 3668 5285
Email: nz_purchases@robust.com
Website: www.robustled.co.nz



1.40Kg

1270mm

78mm

96mm

1

