

PS35CO

Wiring Instructions

Cable Stripping


To ensure firm clamping of all cables in main terminals, at least 20mm of bared conductor should be used.

Wiring Neon Indicators into Circuits


To provide indication of switch position' provision has been made in these switches for inclusion into the circuits of Neon Indicators. These may be mounted remotely or positioned in the switch itself (during manufacture).

Neon Remote from Switch

For Day/Manual Indication connect Neon between terminal marked N1 and Neutral as shown in diagram.

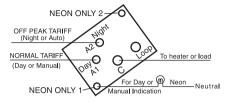

For Night/Auto Indication connect one neon tail from the rear of switch to terminal N2 and the other to Neutral.

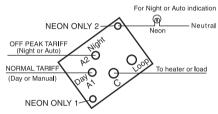

Neon Incorporated in Switch

For Day/Manual Indication insert one Neon tail from rear of switch into the terminal marked N1 and connect the other to Neutral. This may be done via the looping terminal in the switch.

Product of Clipsal Australia Pty Ltd

A member of Schneider Electric

clipsal.com

Contact us clipsal.com/feedback

National Customer Service Enquiries:

Tel 1300 2025 25 Fax 1300 2025 56

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd. The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted.

F014/03 CLIPCOM 16249 June 2008