

Description

The WallMateTM is the original self drilling plasterboard anchor. Available in nylon or zinc, the WallMateTM would probably be the quickest and easiest plasterboard anchor to install and remove.

Specification

Material	Nylon, Zinc Composite			
Corrosion Protection	-			
Head Style	Flush - Phillips #2			
Fixing Method	Fixture Aligned			
Setting Method	Rotation			
Anchoring Method	Thread Forming			
Screw Gauges	6-8			
Drilled Hole Diameters*	8mm			
Anchor Lengths	42mm			
Minimum Screw Length	20mm			
Substrates	Plasterboard, Dry Partition Walls, Aerated			
	Concrete (with 8mm pre-drilled hole)			

*For pre-drilling into aerated concrete

Related Products

Drill Hole Cleaning Pump* Wet and Dry Vacuum* *For installation in aerated concrete Drill Driver Screw Gun Drill Bits



Features & Benefits

 Both versions of the WallMate[™] feature an effective drill point for easy penetration of plasterboard and fast installation. If a long screw is used, this point will break away so as not to restrict achievement of a firm fix.

- The anchor's screw thread profile is designed for efficient cutting and positive grip.
- Both the screw and the WallMate[™] can be easily removed without losing the anchor inside the cavity.
- The low profile head allows for flush fixing.




WallMate[™] Plasterboard Anchors

Trades & Applications

	Miscellaneous Trades	Plumbing Contractor	Electrical Contractor	
Light Hook/Bracket Installation	v			
Electrical Fitting Installation			~	
Bathroom Accessory Installation		✓		

Installation

- 1. Insert the point of a #2 Philips Head screwdriver into the recess of the WallMate[™], place the drill point against the wall, lightly piercing the face paper, and screw the anchor into the plasterboard until the head is flush with the surface.
- 2. Place the fixture over the anchor, insert the appropriate gauge screw through the fixture, into the head of the WallMate[™] and tighten the fixture in place.

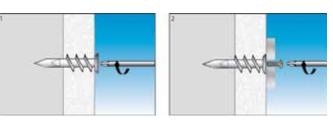





WallMate[™] - Plasterboard Anchor

Part No	Anchor	Min Screw	Drilled Hole	Screw	Body	Order	
	Length (mm)	Length (mm)	Ø* (mm)	Gauge	Туре	Qty	
WMZ	42	20	8	6-8	Metal	100	
WM25	42	20	8	6-8	Nylon	100	

* For pre-drilling into aerated concrete