



Introducing the Blue Monkey™

Blue Monkey™ Plug Point Level Stencil



**NEW
PRODUCT
RELEASE**

Part No. MONKEY


The Blue Monkey™ is a must have tool when fitting C-brackets for plug points and light switches. This clever stencil is easy to use and includes a built in level indication. The Blue Monkey™ template ensures **FAST, CLEAN, ACCURATE** installations every time. Look how easy it is to use!



1. Measure the position desired for the plug point and mark the centre point of the hole you wish to cut for a C-bracket.




2. Check for studs, metal brackets and power cords behind the plaster board using a suitable stud finder.

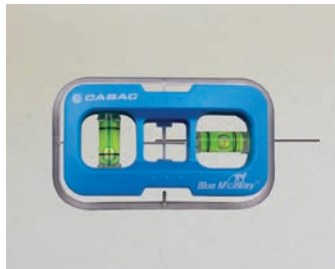

3. If there are no studs, place the Blue Monkey™ and match the cross-hair in the centre with the marked point on the plaster board.



4. Check that the Blue Monkey™ is level (horizontally or vertically) and draw around the stencil with a pencil or pen.

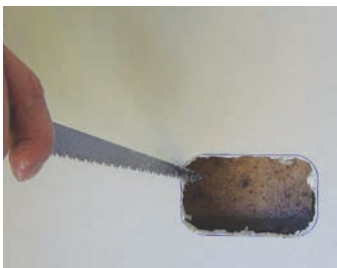

5. After drawing the outline on the plaster board, using a Wall Board Saw, cut around the outline.



6. Place a C-Bracket in the cut-out hole in the plaster board.



7. Connect and fit the plug point.



Blue Monkey™

