# **Opticom® Fiber Optic Patch Panels and Trays**



# specifications

The rack mount fiber tray and fiber adapter patch panels shall house, organize, manage and protect fiber optic cable, splices, and connectors. Available in both flat and angled versions, patch panels shall accommodate all Panduit pre-terminated MTP\* cassettes, fiber adapter panels (FAP), fiber mount panels (FMP), associated trunk cables, connectors, patch cords, and shall include integral cable management. Fiber trays shall be constructed of steel material. Steel cover shall be removable for cabling and connector access during installation. Enclosure shall have multiple knockouts for a variety of trunk cable entry points.



# technical information

Dimensions:	CFAPPBL1: 19.00"W x 1.72"H x 0.44"D (482.60mm x 43.7mm x 11.2mm) CFAPPBL1A: 19.00"W x 1.72"H x 4.16"D (482.60mm x 43.7mm x 105.5mm)			
	CFAPPBL2: 19.00"W x 3.47"H x 0.44"D (482.60mm x 88.1mm x 11.2mm) CFAPPBL2A: 19.00"W x 3.47"H x 4.16"D (482.60mm x 88.1mm x 105.6mm)			
	FMT1: 19.00"W x 1.72"H x 11.16"D (482.60mm x 43.7mm x 283.4mm) FMT1A: 19.00"W x 1.72"H x 11.16"D (482.60mm x 43.7mm x 283.4mm)			
	FMT2: 19.00"W x 3.47"H x 11.16"D (482.60mm x 88.1mm x 283.4mm) FMT2A: 19.00"W x 3.47"H x 11.16"D (482.60mm x 88.1mm x 283.4mm)			
Mounting:	Integral mounting flange for installation in 19" wide EIA-310 racks			
Accessories:	Mounting hardware and accessory kit with labels included			

# key features and benefits

Works with all Panduit® Opticom® Fiber Optic Cassettes and Fiber Adapter Panels	Provides versatility and flexibility with a fully modular solution for a variety of pre-terminated installations, FAP and field termination, and splicing installations. Works with all Panduit LC, SC, ST, MT-RJ and MTP* fiber adapter panels and cassettes
Provides higher patch field density in fewer rack units saving valuable space	Modular design mounts up to four Opticom® Cassettes or FAP's per RU and up to three Opticom® Cassettes per RU for the angled fiber optic trays
Angled design	Angled design allows cable to flow to each side of the rack: patch cords can be routed directly into vertical cable managers
Fiber optic splice module	Can fusion splice up to 96 fibers per RU in a single enclosure with one-to-one splice-to-patching ratio
Side and rear cable entry	Provides installer with several options to route cable within the tray
Patch panel mounting	Hardware provided to allow patch panel to be pre-assembled before mounting to rack

# applications

Opticom® Rack Mount Fiber Trays and Fiber Adapter Patch Panels provide a flexible and modular system for managing fiber termination, connections, and patching for all applications and offer the industry's highest patch field density and fiber counts for all fiber termination methods. Angled fiber optic patch

panels facilitate proper bend radius of each patch cord as it is routed directly into a vertical cable manager, eliminating the need for horizontal cable managers. The high capacity, high-density solution maximizes rack space utilization and reduces floor space requirements for lower overall system costs.

# Opticom® Rack Mount Fiber Adapter Patch Panels

1 RU for 4

FAP's or cassettes: CFAPPBL1

1 RU for 4 FAP's or

cassettes, angled: CFAPPBL1A

2 RU for 8

FAP's or cassettes: CFAPPBL2

2 RU for 8 FAP's or

cassettes, angled: CFAPPBL2A

## Opticom® Rack Mount Fiber Trays

For use

with CFAPPBL1: FMT1

For use

with CFAPPBL1A: FMT1A

For use

with CFAPPBL2: FMT2

For use

with CFAPPBL2A: FMT2A

### Opticom® Fiber Adapter Panels

12 duplex LC,

10Gig™:

6 duplex LC,

10Gig™:

FAP6WAQDLCZ 12 duplex LC: FAP12WEIDLC

FAP12WAQDLCZ

**FAP6WEIDLC** 

FAP6WAQDSCZ

FAP3WAQDSCZ

6 duplex LC:

6duplex SC,

10Ġig™:

3 duplex SC,

10Gig™:

6 duplex SC: **FAP6WEIDSC** 

3 duplex SC: **FAP3WEIDSC** 

6 simplex ST:

**FAP6WST** 

6 MTP\*:

FAPH6W12BLMTP

### OptiCore® Patch Cords

12 fiber MTP\*

to MTP\*:

F^12D5-5M\*\*Y

Duplex LC to LC: F^E10-10M\*\*Y Duplex SC to SC: F^D3-3M\*\*Y

Duplex SC to LC: F^D3-10M\*\*Y

## Splice Modules

Splice

module (fusion): **FOSMF** 

Splice module (mechanical):

**FOSMM** 

#### Tools and Accessories

Patch cord removal tool:

PCRT1

^Substitute for fiber types:

50/125µm)

 $X = (OM3/OM4 - 10Gig^{TM})$   $5 = (OM2 - 62.5/125\mu m)$   $6 = (OM1 - 62.5/125\mu m)$ 

 $9 = (OS1 - 9/125\mu m)$ 

\*MTP is a registered trademark of US Conec Ltd. \*\*Substitute for length in meters: 1, 2, 3, 5 and 10 are standard lengths.

Contact Panduit Customer Service for other available lengths.

# **Opticom® Fiber Optic Patch Panels and Trays**


# Fiber Capacities

	Enclosure and Fiber count			
Fiber Adapter Panel Type	FMT1 (holds up to 4 FAPs)	FMT1A (holds up to 4 FAPs)	FMT2 (holds up to 8 FAPs)	FMT2A (holds up to 8 FAPs)
12 duplex LC adapters	96	96	192	192
8 duplex LC adapters	64	64	128	128
6 duplex LC adapters	48	48	96	96
6 duplex SC adapters	48	48	96	96
4 duplex SC adapters	32	32	64	64
3 duplex SC adapters	24	24	48	48
6 simplex ST adapters	24	24	48	48


	Enclosure and Fiber count			
QuickNet ® Cassette Type	FMT1 (holds up to 4 cassettes)	FMT1A (holds up to 3 cassettes)	FMT2 (holds up to 8 cassettes)	FMT2A (holds up to 6 cassettes)
12 duplex LC adapters to 2 MTP*	96	72	192	144
6 duplex LC adapters to 1 MTP*	48	36	96	72
6 duplex SC adapters to 1 MTP*	48	36	96	72
3 duplex SC adapters to 1 MTP*	24	18	48	36
6 simplex ST adapters to 1 MTP*	24	18	48	36

# OptiCom® Fiber Optic Patch Panels and Trays


## CFAPPBL1 with FMT1

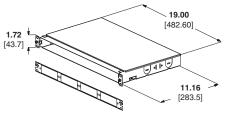


## CFAPPBL1A with FMT1A



### CFAPPBL2 with FMT2

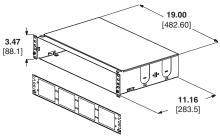

### CFAPPBL2A with FMT2A

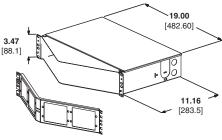

Dimensions are in inches. [Dimensions in brackets are metric].

#### WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT CANADA Markham, Ontario cs-cdn@panduit.com Phone: 800.777.3300 PANDUIT EUROPE LTD. London, UK cs-emea@panduit.com Phone: 44.20.8601.7200 PANDUIT SINGAPORE PTE. LTD. Republic of Singapore cs-ap@panduit.com Phone: 65.6305.7575 PANDUIT JAPAN Tokyo, Japan cs-japan@panduit.com Phone: 81.3.6863.6000 PANDUIT LATIN AMERICA Jalisco, Mexico cs-la@panduit.com Phone: 52.33.3777.6000 PANDUIT AUSTRALIA PTY. LTD. Victoria, Australia cs-aus@panduit.com Phone: 61.3.9794.9020

For a copy of Panduit product warranties, log on to www.panduit.com/warranty

#### For more information

## Visit us at www.panduit.com

Contact Customer Service by email: cs@panduit.com or by phone: 800-777-3300 and reference FBSP39

© 2009 Panduit Corp. ALL RIGHTS RESERVED. **WW-FBSP39** 9/2009

